

CCR1016-12G series

First use

The device comes preinstalled with RouterOS and is ready to use. Device is compatible with RouterOS v6.30 and newer, if your device comes preinstalled with an earlier version, please upgrade before using it.

The Ethernet ports 1 has a default IP address for connecting: 192.168.88.1 username is admin and there is no password.

Please connect with your web browser to this IP address and choose Webfig to configure it. The device doesn't have any other configuration applied by default, please connect to it, and set up WAN IP addresses, user password, firewall etc.

See this page for connection and configuration guides: <http://mt.lv/help>

Powering

The device accepts powering through a IEC C14 standard connector and supports both 110/220 V

Extension Slots and Ports

- Twelve 10/100/1000 Mbit/s Gigabit Ethernet with Auto-MDI/X
- Two SODIMM DDR3 slots, 2x 1GB 10600 modules installed
- microUSB port type AB
- RS232 serial console port, The serial port is set by default to 115200bit/s, 8 data bits, 1 stop bit, no parity

The Ether12 port accepts Etherboot/Netinstall for reinstalling RouterOS.

Buttons and Jumpers

The RouterBOOT reset button has the following functions. Press the button and apply the power, then:

- Release the button when green LED starts flashing, to reset RouterOS configuration to defaults.
- Release the button when the LED turns solid green to clear all configuration and defaults.
- Release the button after LED is no longer lit (~20 seconds) to cause device to look for Netinstall servers (required for reinstalling RouterOS over network).

Regardless of the above option used, the system will load the backup RouterBOOT loader if the button is pressed before power is applied to the device. Useful for RouterBOOT debugging and recovery.

Operating System Support

The device supports RouterOS software with the version number at or above what is indicated in the RouterOS menu /system resource. Other operating systems have not been tested.

Safety Notice

Electric shock hazard. This equipment is to be serviced by trained personnel only.



CE Declaration of Conformity

Full Declaration of Conformity (DoC) may be obtained by visiting our product page on <https://mikrotik.com/products>.

Manufacturer: MikroTik SIA, Brivibas gatve 214i Riga, Latvia, LV1039.



EN	Hereby, MikroTik SIA declares that this routerboard is in compliance with the essential requirements and other relevant provisions of directive 2014/53/EC.
BG	С настоящето, MikroTik SIA декларира, че routerboard е в съответствие със съществените изисквания и другите приложими разпоредби на директива 2014/53/ЕС.
CZ	MikroTik SIA tímto prohlašuje, že routerboard splňuje základní požadavky a všechna příslušná ustanovení směrnice 2014/53/EU.
DK	Undertegnede MikroTik SIA erklærer herved, at følgende udstyr routerboard overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.
DE	Hiermit erklärt MikroTik SIA dass sich das Gerät routerboard in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EG befindet.
EE	Käesolevaga kinnitab MikroTik SIA seadme routerboard vastavust direktiivi 2014/53/EÜ põhivõetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
GR	Με την παρούσα ο κατασκευαστής MikroTik SIA δηλώνει ότι routerboard συμμορφωνεται προς τις ουσιώδεις απαιτήσεις και τις λοιπές σχετικές διατάξεις της οδηγίας 2014/53/EK.
ES	Por la presente, MikroTik SIA declara que este routerboard cumple con los requisitos esenciales y otras exigencias relevantes de la directiva 2014/53/EC.
IT	Con la presente MikroTik SIA dichiara che questo routerboard è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/CE.
LV	Ar šo MikroTik SIA deklarē, ka routerboard atbilst direktīvās 2014/53/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
LT	Šiuo MikroTik SIA deklaruoją, kad šis routerboard atitinka esminius reikalavimus ir kitas 2014/53/EB direktivos nuostatas.
HU	A MikroTik SIA ezzennel kijelenti, hogy a routerboard típusú beren-dezés teljesít az alapvető követelményeket és más 2014/53/EK irányelvben meghatározott vonatkozó rendelkezéseket.
NL	Hierbij verklaart MikroTik SIA dat het toestel I routerboard in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EG.
PL	Niniejszym MikroTik SIA deklaruje że routerboard jest zgodny z zasadniczymi wymaganiami i innymi właściwymi postanowieniami dyrektywy 2014/53/EC.
PT	Eu, MikroTik SIA declaro que o routerboard cumpre os requisitos essenciais e outras provisões relevantes da directiva 2014/53/EC.
RO	Prin prezenta, MikroTik SIA declară că aparatul routerboard este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale directivei 2014/53/CE.
SL	MikroTik SIA týmto vyhlašuje, že routerboard splňá základné požiadavky a všetky príslušné ustanovenia smernice 2014/53/EU.
SI	MikroTik SIA izjavlja, da je ta routerboard v skladu z bistvenimi zahtevami in drugimi relevantnimi določili direktive 2014/53/ES.
FI	MikroTik SIA vakuuttaa täten että routerboard tyypin laite on direktiivin 2014/53/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
SE	Härmed intygar MikroTik SIA att denna routerboard är i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EG.
NO	MikroTik SIA erklærer herved at routerboard er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 2014/53/EF.

EN. Instruction manual: Connect the power adapter to turn on the device. Open 192.168.88.1 in your web browser, to configure it. More information on <http://mt.lv/help>.

BG. Инструкция: Сърдете адаптера на захранване, за да включите устройството. Отворете 192.168.88.1 в уеб браузър, за да настроите продукта.

Повече информация в <http://mt.lv/help>.

CZ. Návod k použití: Připojte napájecí adaptér k zapnutí přístroje. Otevřete 192.168.88.1 ve webovém prohlížeči pro konfiguraci produktu.

Více informací najdete v <http://mt.lv/help>.

DK. Instruktionsbog: Tilslut strømadapteren for at tænde for enheden. Åbn 192.168.88.1 i en webbrowser til at konfigurere produktet.

Mere information i <http://mt.lv/help>.

FR. Mode d'emploi: Connectez l'adaptateur d'alimentation pour allumer l'appareil.

Ouvrez 192.168.88.1 dans un navigateur Web pour configurer le produit. Plus d'informations dans <http://mt.lv/help>.

DE. Bedienungsanleitung: Verbinden Sie das Netzteil, um das Gerät einzuschalten. Öffnen Sie 192.168.88.1 in einem Web-Browser, um das Produkt zu konfigurieren. Weitere Informationen im <http://mt.lv/help>.

EE. Kasutusjuhend: Ühendage toiteadapter seadme sisselülitamiseks. Avatud 192.168.88.1 veebilehitseja seadistada toodet. Rohkem teavet <http://mt.lv/help>.

ES. Manual de instrucciones: Conecte el adaptador de alimentación para encender la unidad. Abra 192.168.88.1 en un navegador web para configurar el producto. Más información en <http://mt.lv/help>.

IT. Manuale di istruzioni: Collegare l'adattatore di alimentazione per accendere l'unità. Aprire 192.168.88.1 in un browser Web per configurare il prodotto. Maggiori informazioni in <http://mt.lv/help>.

LT. Lietošanas instrukcija: Pievienojiet Strāvas adapteri, lai ieslēgtu ierīci. Atvērt 192.168.88.1 ar interneta pārlūku, lai konfigurētu produktu. Plašāka informācija <http://mt.lv/help>.

SL. Načodimosi instrukcija: Priključite maitinimo adapterj injunkite i ūrenginj. I interneto naršykite 192.168.88.1 Atidarykite galite konfigūruoti gaminj. Daugiau informacijos rasite <http://mt.lv/help>.

HU. Használati utasítás: Csatlakoztassa a hálózati adaptort a készülék bekapcsolásához. Megnyitás 192.168.88.1 egy webböngészőben beállítani a terméket. Több információ <http://mt.lv/help>.

NO. Handleiding: Sluit voedingsadapter aan op het apparaat in te schakelen. Open 192.168.88.1 in een webbrowser om het product te configureren. Meer informatie in <http://mt.lv/help>.

PL. Instrukcja obsługi: Podłącz adapter zasilania, aby włączyć urządzenie. Otwórz 192.168.88.1 w przeglądarce internetowej, aby skonfigurować urządzenie. Więcej informacji w <http://mt.lv/help>.

PT. Manual de instruções: Conecte o adaptador de alimentação para ligar o aparelho. Abra 192.168.88.1 em um navegador da web para configurar o produto. Mais informações em <http://mt.lv/help>.

RO. Instrucțiuni de utilizare: Conectați adaptorul de alimentare pentru a porni aparatul. Deschideți 192.168.88.1 într-un browser web pentru a configura produsul. Mai multe informații în <http://mt.lv/help>.

SK. Návod na použitie: Pripojte napájací adaptér k zapnutiu prístroja. Otvorte 192.168.88.1 vo webovom prehľadeči pre konfiguráciu produktu. Viac informácií nájdete v <http://mt.lv/help>.

FI. Käyttöohje: Kytke virtalähde pääle laitteeseen. Avaa 192.168.88.1 selaimessa määritää tuotteen. Lisää tietoa <http://mt.lv/help>.

SE. Instruktionsmanual: Anslut nätagatern för att slå på enheten. Öppna 192.168.88.1 i en webbläsare för att konfigurera produkten. Mer information på <http://mt.lv/help>.

GR. εγχειρίδιο: Συνδέστε τον προσαρμούσα τροφοδοσία για να ενεργοποιήσετε τη μονάδα. Ανοίξτε 192.168.88.1 σε ένα πρόγραμμα περιήγησης στο Web για να διαμορφώσετε το προϊόν. Περισσότερες πληροφορίες στο <http://mt.lv/help>.

RU. Руководство по эксплуатации: подключите адаптер питания чтобы включить устройство. Откройте 192.168.88.1 в своем веб-браузере для конфигурации. Дополнительная информация: <http://mt.lv/help>.

MPE statement

This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.



Frequency bands terms of use

Frequency range (for applicable models)	Channels used	Maximum Output Power (EIRP)	Restriction
2412-2472 MHz	1 - 13	20 dBm	Without any restriction to use in all EU Member States
5150-5250 MHz	26 - 48	23 dBm	Restricted to indoor use only*
5250-5350 MHz	52 - 64	20 dBm	Restricted to indoor use only*
5470-5725 MHz	100 - 140	27 dBm	Without any restriction to use in all EU Member States

* It is the customer's responsibility to follow local country regulations, including operation within legal frequency channels, output power, cabling requirements, and Dynamic Frequency Selection (DFS) requirements. All MikroTik radio devices must be professionally installed!